
ATIM Cloud Wireless

Sigfox Tester

TST

Quick Guide



Concerned model:
ACW/SF8-TST



Coverage test

To realize a network coverage test, the below steps should be followed:

1. The tester must be held vertically **and** from the bottom part (refer to the adjacent picture).
2. Double press the pushbutton.
3. Wait 40 seconds (Downlink maximum response time from the Sigfox network) until the response of the Sigfox station.
4. LED blinks and shows the reception quality of the Sigfox signal in function of the displayed colour (refer to the below scheme)



Note

In case of “static” applications (devices’ locations are fixed), it is important to test the exact location where the sensor will be installed.

